
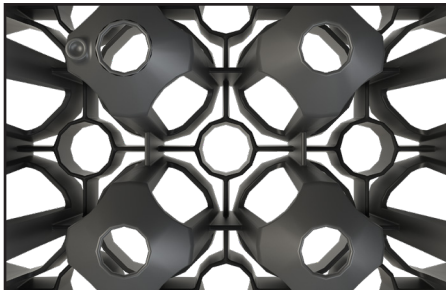


BCC FiberCell 126/35

Dimensions:


LxWxH mm	580x375x78
No. cavities:	126
Cells/m ²	580
Stacking height (mm)	37mm
FiberCell Ø (mm)	35

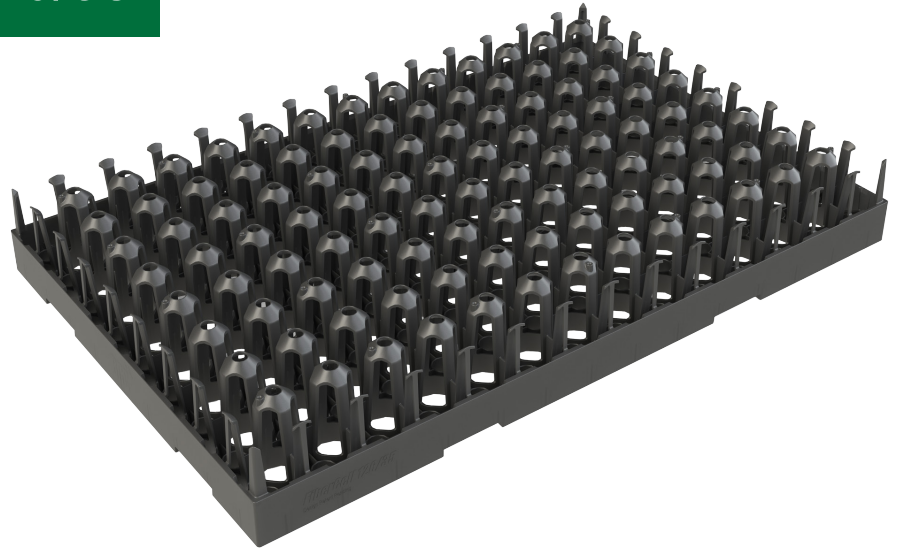

good drainage and ventilation



the design ensures durability

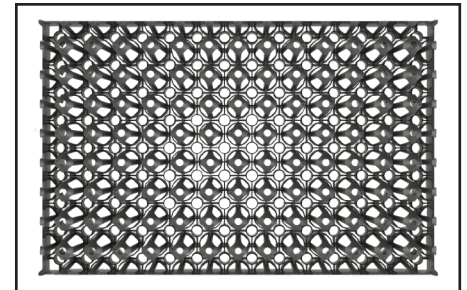

outer dimension: 580x375mm

BCC FiberCell-126/35 is a holder for FiberCells with a diameter of 35mm. The design is adopted to suit the existing infrastructure in nurseries in South America. FiberCell-126/35 is made from high quality PP plastic using an advanced mould with more than 30 injection points for plastic. The control system, where each injection point is individually controlled ensures an even filling of plastic at an optimal temperature. This ensures no stress is built up in the plastic and a better finish and a longer life span of the product is guaranteed. The product has a design, which ensures durability and all edges and corners are well rounded off to ensure comfortable handling.

The design is optimized to help create strong and healthy plants with a vital root system. The interaction of FiberCell material and holder is crucial for the successful propagation of a top quality rootplug. The smooth surface of the FiberCell-126/35 makes it easy to clean the product.

Please contact BCC AB or your local representative for samples and prices.