


FiberCell 24 Hybrid Holder




Dimensions:

LxWxH (mm) - Holder:	517 x 350 x 140
FiberCell dimensions:	Ø80mm with 130 - 160mm length
Insert dimensions:	80 x 80 (top), 62 x 62 (bottom) x 132mm
No. cavities:	24
Cells/m ² :	133
Rootplug volume:	With insert: 600cc (XXL600 insert) Paperpot: 590-725cc
Stacking height (Holder):	71mm (without inserts)
Stacking height (Inserts):	43mm

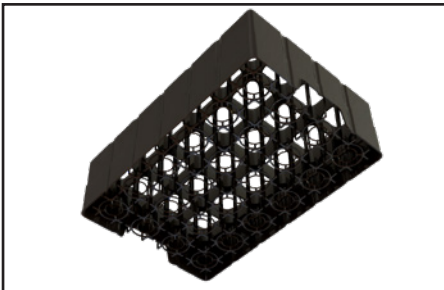

outer dimension: 517x350mm

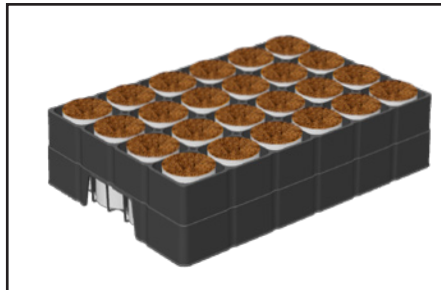

sidewalls to protect against excessive evaporation



good drainage and ventilation

KEY FEATURES:

- Shares same dimensions as the BCC "Borneo" tray family – optimal size and weight for handling in nursery and infield
- Hybrid solution - tray functions as a conventional insert tray as well as a paperpot holder
- Large ventilation areas along sides and top for optimum air pruning and to avoid root bridging
- Protected around sides to reduce evaporation and drying out
- Able to grow 160mm tall rootplugs in paperpots
- Large bottom drainage hole
- Ribs in top part to support FiberCell to fit snug for automated production
- Root guiding ribs in XXL600 insert
- Trays nest at 71mm stacking height for efficient transportation and storage



Insert cell XXL600 for FC 24 Hybrid

Please contact BCC AB or your local representative for samples and prices.